



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date 30-loka-21, Pattern Type, Pattern Difficulty, Pattern Designer Jäke, Pattern Volume (ml) 22,23

Surface Information

Surface Type Synthetic, Surface Brand, Age

Pattern Parameters

Pattern Number, Pattern Name Bdt syksy 2024, Mode Clean & Oil, Forward Speed Heavy Clean (Envoy), Start Cleaner Spray 0, Start Squeegee 0, Start Oiling 6, Split Pattern


Supplies Information

Lane Cleaner Judge, Cleaner Mixture Ratio 8 : 1, Cleaner Transition Distance Authority22, Cleaner Spray End Distance 53 Envoy, Lane Conditioner Hp 309 hv

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Table with 8 rows (ZONE 1-8) and 33 columns (7 Pin Side, Board Number, 10 Pin Side).

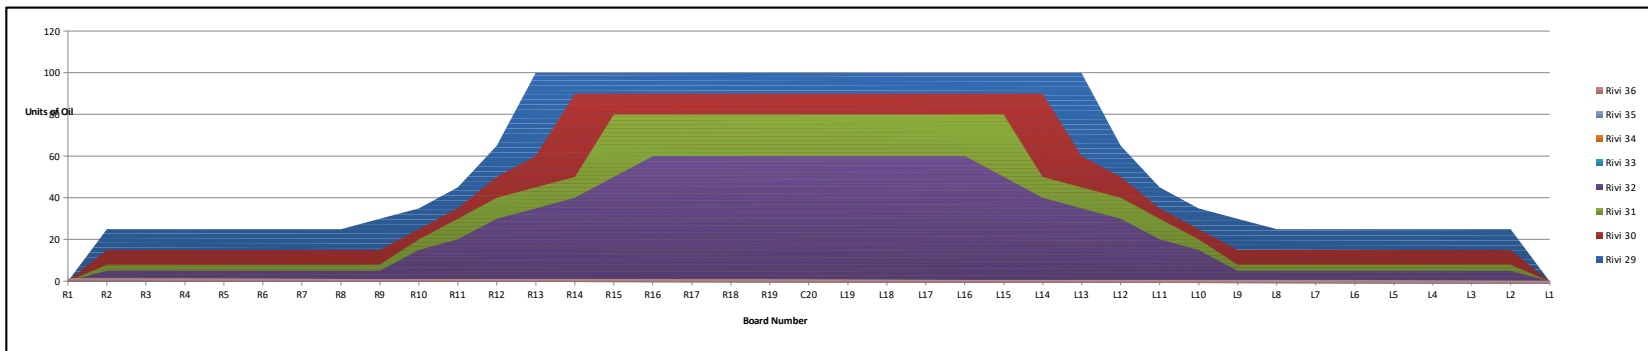



Bdt syksy 2024

Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 25,0	4,0	3L-7L	Left = 0,0	#JAKO/0!
3R-7R	Right= 25,0	4,0	3R-7R	Right= 0,0	#JAKO/0!
18L-18R	Center = 100,0		18L-18R	Center= 0,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 15,0	6,0	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 15,0	6,0	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 90,0		18L-18R	Center= #JAKO/0!	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 8,0	10,0	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 8,0	10,0	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 80,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 5,0	12,0	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 5,0	12,0	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center = 60,0		18L-18R	Center= #JAKO/0!	

Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,105	4,0	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,105	4,0	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,419		18L-18R	Center= 0,000	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,050	6,0	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,050	6,0	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,302		18L-18R	Center= 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,027	10,0	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,027	10,0	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,268		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,013	12,0	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,013	12,0	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,151		18L-18R	Center= 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

