



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date 24-touko-21, Pattern Type, Pattern Difficulty, Pattern Designer JKH, Pattern Volume (ml) 21,77

Surface Information

Surface Type Synthetic, Surface Brand, Age

Pattern Parameters

Pattern Number, Pattern Name Carbo 2022 s, Mode Clean & Oil, Forward Speed Quick Clean, Start Cleaner Spray 0, Start Squeegee 0, Start Oiling 6, Split Pattern


Supplies Information

Lane Cleaner Judge, Cleaner Mixture Ratio 6 : 1, Cleaner Transition Distance Authority22, Cleaner Spray End Distance 54 Envoy, Lane Conditioner Logic

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Table with 8 rows (ZONE 1-8) and 30 columns (7 Pin Side, Board Number, 10 Pin Side).

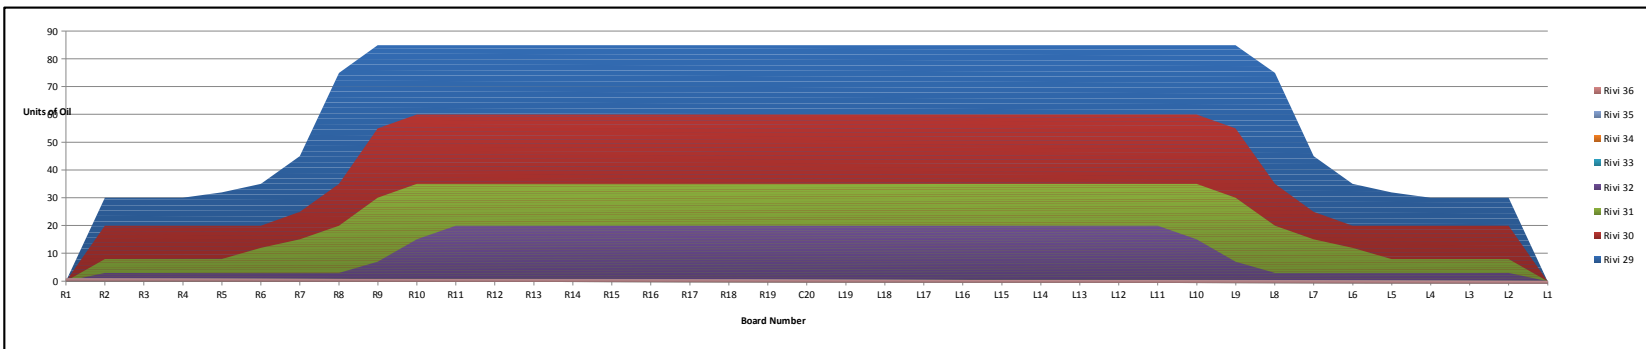



## Carbo 2022 s

### Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 34,4	2,4	3L-7L	Left = 0,0	#JAKO/0!
3R-7R	Right= 34,4	2,4	3R-7R	Right= 0,0	#JAKO/0!
18L-18R	Center= 85,0		18L-18R	Center= 0,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 21,0	2,8	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 21,0	2,8	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 60,0		18L-18R	Center= #JAKO/0!	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 10,2	3,4	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 10,2	3,4	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 35,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 3,0	6,6	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 3,0	6,6	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center = 20,0		18L-18R	Center= #JAKO/0!	

### Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,144	2,4	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,144	2,4	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,356		18L-18R	Center= 0,000	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,088	2,8	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,088	2,8	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,251		18L-18R	Center= 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,034	3,4	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,034	3,4	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,117		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,006	6,6	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,006	6,6	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,042		18L-18R	Center= 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

