



Official Lane Maintenance and Capital Equipment Provider

DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date: 24-touko-21
Pattern Type:
Pattern Difficulty:
Pattern Designer: JKH
Pattern Volume (ml): 24,21

Surface Information

Surface Type: Synthetic
Surface Brand:
Age:

Pattern Parameters

Pattern Number:
Pattern Name: Carbo kevät 24
Mode: Clean & Oil
Forward Speed: Quick Clean
Start Cleaner Spray: 0
Start Squeegee: 0
Start Oiling: 6
Split Pattern:


Supplies Information

Lane Cleaner: Judge
Cleaner Mixture Ratio: 6 : 1
Cleaner Transition Distance: Authority22
Cleaner Spray End Distance: 54 Envoy
Lane Conditioner: hp209hv

Notes:

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Table with 7 Pin Side, Board Number, and 10 Pin Side columns, containing numerical data for zones 1-8.

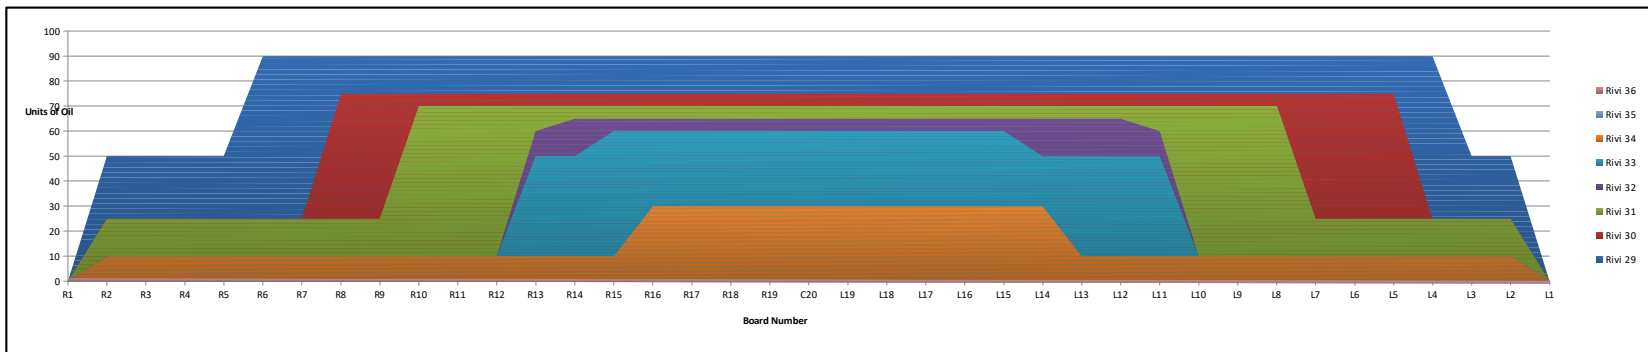



Carbo kevät 24

Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 82,0	1,0	3L-7L	Left = 10,0	6,0
3R-7R	Right = 66,0	1,3	3R-7R	Right = 10,0	6,0
18L-18R	Center = 90,0		18L-18R	Center = 60,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 55,0	1,3	3L-7L	Left = 10,0	3,0
3R-7R	Right = 25,0	3,0	3R-7R	Right = 10,0	3,0
18L-18R	Center = 75,0		18L-18R	Center = 30,0	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 25,0	2,8	3L-7L	Left = 0,0	#JAKO/0!
3R-7R	Right = 25,0	2,8	3R-7R	Right = 0,0	#JAKO/0!
18L-18R	Center = 70,0		18L-18R	Center = 0,0	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 10,0	6,5	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 10,0	6,5	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 65,0		18L-18R	Center = #JAKO/0!	

Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,241	1,0	3L-7L	Left = 0,013	6,0
3R-7R	Right = 0,194	1,3	3R-7R	Right = 0,013	6,0
18L-18R	Center = 0,264		18L-18R	Center = 0,075	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,115	1,3	3L-7L	Left = 0,029	3,0
3R-7R	Right = 0,052	3,0	3R-7R	Right = 0,029	3,0
18L-18R	Center = 0,157		18L-18R	Center = 0,088	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,042	2,8	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,042	2,8	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,117		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,029	6,5	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,029	6,5	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,191		18L-18R	Center = 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

