



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date 11-loka-18, Pattern Type, Pattern Difficulty, Pattern Designer jkl, Pattern Volume (ml) 20,40

Surface Information

Surface Type Synthetic, Surface Brand, Age

Pattern Parameters

Pattern Number, Pattern Name Carbo syksy18, Mode Clean & Oil, Forward Speed Quick Clean, Start Cleaner Spray 0, Start Squeegee 0, Start Oiling 6, Split Pattern


Supplies Information

Lane Cleaner Judge, Cleaner Mixture Ratio 6 : 1, Cleaner Transition Distance Authority22, Cleaner Spray End Distance 54 Envoy, Lane Conditioner DEFYv30

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio L/R, Zone Volume (ml)).

Table with 8 rows (ZONE 1-8) and 33 columns (7 Pin Side, Board Number, 10 Pin Side).

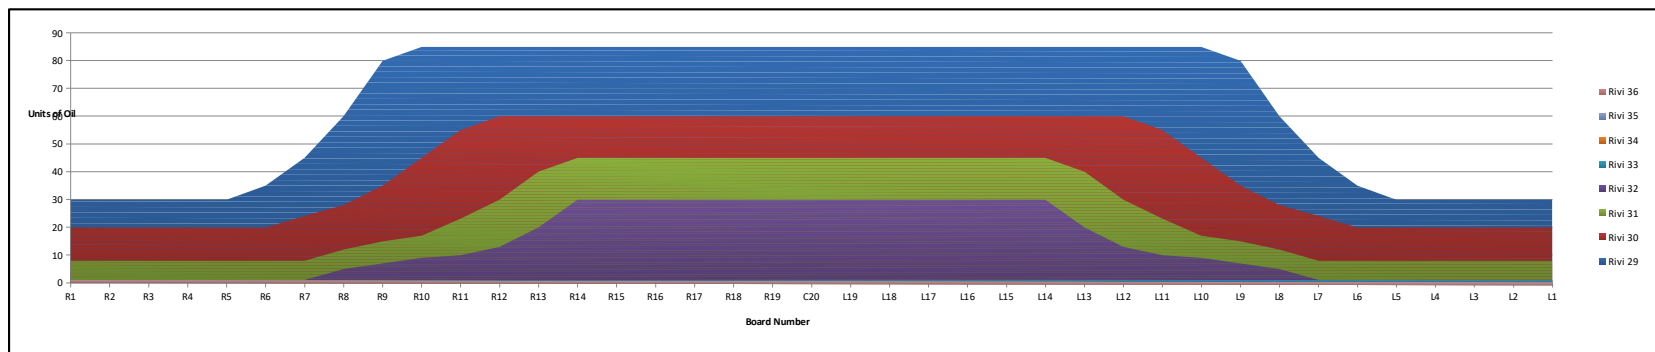



Carbo syksy18

Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 34,0	2,5	3L-7L	Left = 1,0	1,0
3R-7R	Right= 34,0	2,5	3R-7R	Right= 1,0	1,0
18L-18R	Center= 85,0		18L-18R	Center= 1,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 20,8	2,8	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 20,8	2,8	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 60,0		18L-18R	Center= #JAKO/0!	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 8,0	5,6	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 8,0	5,6	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 45,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 1,0	30,0	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 1,0	30,0	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center = 30,0		18L-18R	Center= #JAKO/0!	

Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,128	2,5	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,128	2,5	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,321		18L-18R	Center= 0,000	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,070	2,8	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,070	2,8	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,201		18L-18R	Center= 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,030	5,6	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,030	5,6	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,170		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,000	#JAKO/0!	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,000	#JAKO/0!	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,101		18L-18R	Center= 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

