



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date: 31-elo-23
Pattern Type: Competitive
Pattern Difficulty:
Pattern Designer: JKH
Pattern Volume (ml): 19,37

Pattern Parameters

Pattern Number:
Pattern Name: Cosmic 2025 2.0
Mode: Clean & Oil
Forward Speed: Quick Clean
Start Cleaner Spray: 0
Start Squeegee: 0
Start Oiling: 6
Split Pattern:

Supplies Information

Lane Cleaner: Judge
Cleaner Mixture Ratio: 6 : 1
Cleaner Transition Distance: Authority22
Cleaner Spray End Distance: 54 Envoy
Lane Conditioner: hp309hv


Surface Information

Surface Type: Synthetic
Surface Brand: Brunswick Pro Lane
Age:

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Table with 8 rows (ZONE 1-8) and 33 columns (7 Pin Side, Board Number, 10 Pin Side).

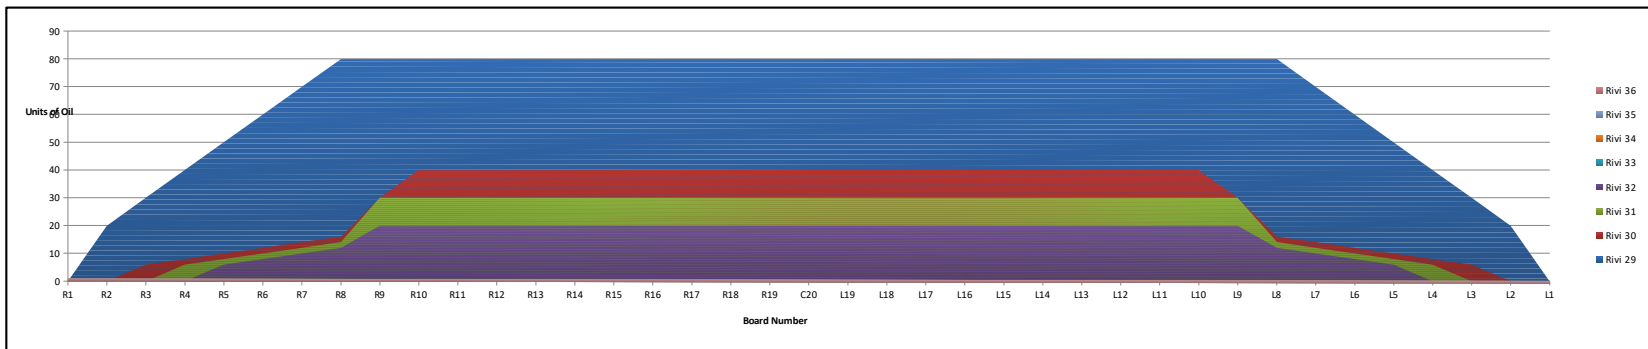



## Cosmic 2025 2.0

### Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 50,0	1,6	3L-7L	Left = 0,0	#JAKO/0!
3R-7R	Right = 50,0	1,6	3R-7R	Right = 0,0	#JAKO/0!
18L-18R	Center = 80,0		18L-18R	Center = 0,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 10,0	4,0	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 10,0	4,0	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 40,0		18L-18R	Center = #JAKO/0!	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 7,2	4,1	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 7,2	4,1	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 30,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 4,8	4,1	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 4,8	4,1	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 20,0		18L-18R	Center = #JAKO/0!	

### Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,251	1,6	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,251	1,6	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,402		18L-18R	Center = 0,000	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,025	4,0	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,025	4,0	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,101		18L-18R	Center = 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,018	4,1	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,018	4,1	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,075		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,018	4,1	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,018	4,1	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,075		18L-18R	Center = 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

