



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date: 31-elo-23
Pattern Type: Competitive
Pattern Difficulty: Medium
Pattern Designer: JKH
Pattern Volume (ml): 22,42

Surface Information

Surface Type: Synthetic
Surface Brand: Brunswick Pro Lane
Age:

Pattern Parameters

Pattern Number:
Pattern Name: Cosmic syksy 23
Mode: Clean & Oil
Forward Speed: Quick Clean
Start Cleaner Spray: 0
Start Squeegee: 0
Start Oiling: 6
Split Pattern:


Supplies Information

Lane Cleaner: Judge
Cleaner Mixture Ratio: 6 : 1
Cleaner Transition Distance: Authority22
Cleaner Spray End Distance: 54 Envoy
Lane Conditioner: HP209 HV

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Pin distribution table with columns for 7 Pin Side, Board Number, and 10 Pin Side, and rows for Zones 1-8.

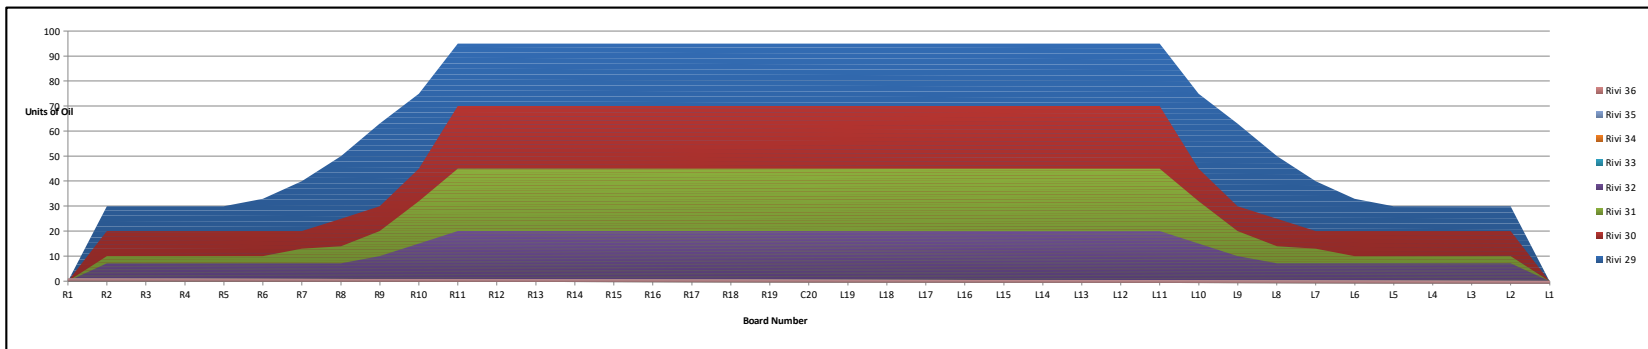



## Cosmic syksy 23

### Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 32,6	2,9	3L-7L	Left = 0,0	#JAKO/0!
3R-7R	Right= 32,6	2,9	3R-7R	Right= 0,0	#JAKO/0!
18L-18R	Center= 95,0		18L-18R	Center= 0,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 20,0	3,5	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 20,0	3,5	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 70,0		18L-18R	Center= #JAKO/0!	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 10,6	4,2	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 10,6	4,2	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 45,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 7,0	2,8	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 7,0	2,8	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center = 20,0		18L-18R	Center= #JAKO/0!	

### Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,137	2,9	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,137	2,9	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,398		18L-18R	Center= 0,000	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,067	3,5	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,067	3,5	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,235		18L-18R	Center= 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,036	4,2	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,036	4,2	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,151		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,026	2,8	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,026	2,8	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,075		18L-18R	Center= 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

