



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date 1-helmi-22
Pattern Type
Pattern Difficulty
Pattern Designer jkh
Pattern Volume (ml) 24,06

Surface Information

Surface Type Synthetic
Surface Brand Brunswick Pro Lane
Age 14

Pattern Parameters

Pattern Number
Pattern Name JBT 2022
Mode Clean & Oil
Forward Speed Quick Clean
Start Cleaner Spray 0
Start Squeegee 0
Start Oiling 6
Split Pattern


Supplies Information

Lane Cleaner Judge
Cleaner Mixture Ratio 6 : 1
Cleaner Transition Distance Authority22
Cleaner Spray End Distance 50 Envoy
Lane Conditioner Logic

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Table with 8 rows (ZONE 1-8) and 33 columns (7 Pin Side, Board Number, 10 Pin Side).

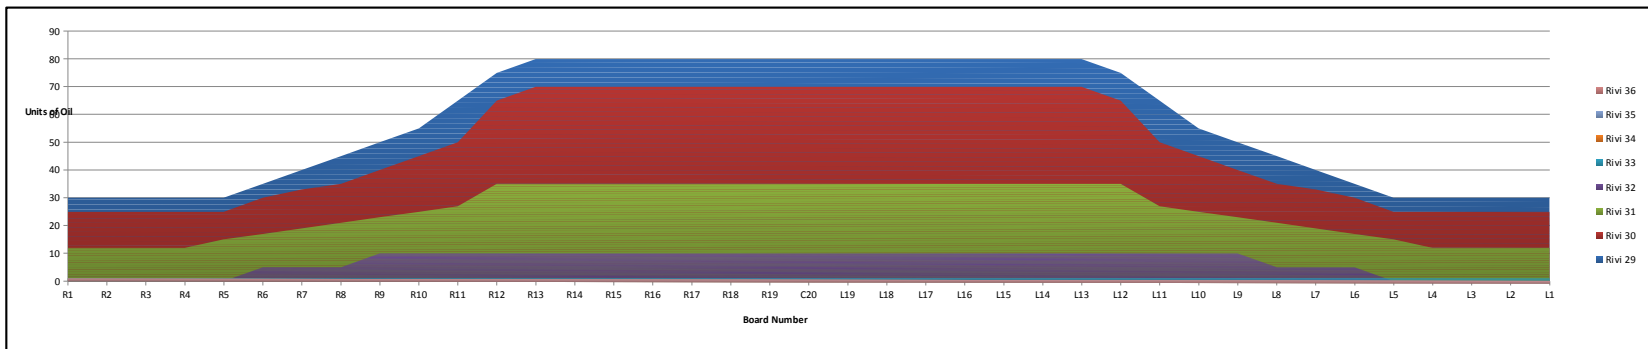



JBT 2022

Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 33,0	2,4	3L-7L	Left = 1,0	1,0
3R-7R	Right = 33,0	2,4	3R-7R	Right = 1,0	1,0
18L-18R	Center = 80,0		18L-18R	Center = 1,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 27,6	2,5	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 27,6	2,5	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 70,0		18L-18R	Center = #JAKO/0!	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 15,0	2,3	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 15,0	2,3	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 35,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 2,0	5,0	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 2,0	5,0	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 10,0		18L-18R	Center = #JAKO/0!	

Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,194	2,4	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,194	2,4	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,469		18L-18R	Center = 0,000	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,116	2,5	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,116	2,5	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,293		18L-18R	Center = 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,038	2,3	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,038	2,3	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,088		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,004	5,0	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,004	5,0	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,021		18L-18R	Center = 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

