



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date: 3-helmi-21
Pattern Type:
Pattern Difficulty:
Pattern Designer:
Pattern Volume (ml): 22,82

Surface Information

Surface Type: Synthetic
Surface Brand:
Age:

Pattern Parameters

Pattern Number:
Pattern Name: JBT SY 2024
Mode: Clean & Oil
Forward Speed: Heavy Clean (Envoy)
Start Cleaner Spray: 0
Start Squeegee: 0
Start Oiling: 6
Split Pattern:


Supplies Information

Lane Cleaner: Judge
Cleaner Mixture Ratio: 6 : 1
Cleaner Transition Distance: Authority22
Cleaner Spray End Distance: 53 Envoy
Lane Conditioner: HP309HV

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Pinfall table with columns for Zone (1-8) and Board Number (L1-L19, C20, R19-R1, R8-R1).

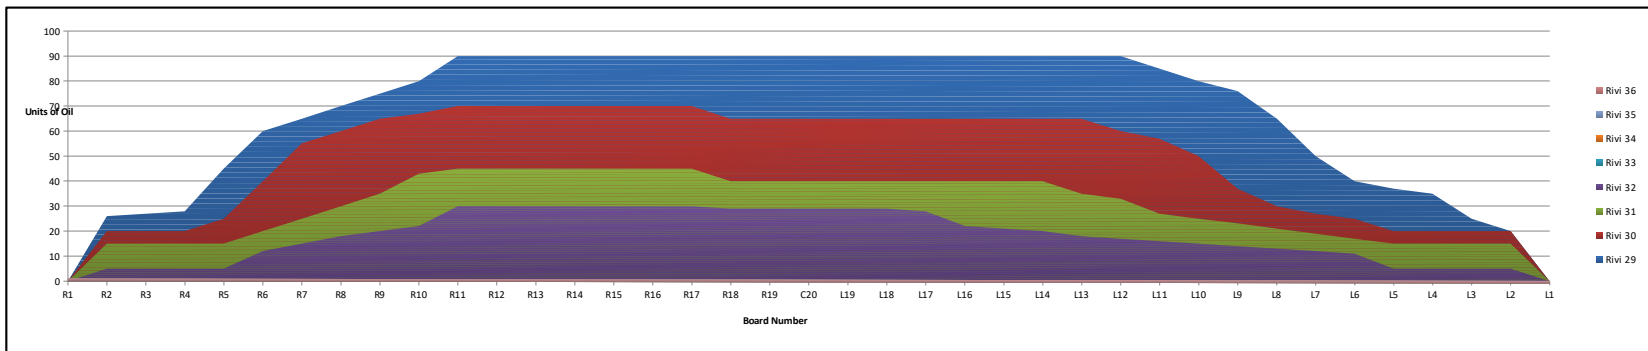



JBT SY 2024

Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 37,4	2,4	3L-7L	Left = 0,0	#JAKO/0!
3R-7R	Right= 45,0	2,0	3R-7R	Right= 0,0	#JAKO/0!
18L-18R	Center= 90,0		18L-18R	Center= 0,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 22,4	2,9	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 32,0	2,0	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 65,0		18L-18R	Center= #JAKO/0!	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 16,2	2,4	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 18,0	2,2	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 40,0		18L-18R	Center= #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 7,6	3,8	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 8,4	3,4	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center = 29,0		18L-18R	Center= #JAKO/0!	

Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,157	2,4	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,189	2,0	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,377		18L-18R	Center= 0,000	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,075	2,9	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,107	2,0	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,218		18L-18R	Center= 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,054	2,4	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,060	2,2	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,134		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,019	3,8	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,021	3,4	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,073		18L-18R	Center= 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

