



Official Lane Maintenance and Capital Equipment Provider

DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date: 9-marras-20
Pattern Type:
Pattern Difficulty:
Pattern Designer: JKH
Pattern Volume (ml): 22,70

Pattern Parameters

Pattern Number:
Pattern Name: Kesäkisa 2024
Mode: Clean & Oil
Forward Speed: Quick Clean
Start Cleaner Spray: 0
Start Squeegee: 0
Start Oiling: 6
Split Pattern:

Supplies Information

Lane Cleaner: Judge
Cleaner Mixture Ratio: 6 : 1
Cleaner Transition Distance: Authority22
Cleaner Spray End Distance: 52 Envoy
Lane Conditioner: hp309hv


Surface Information

Surface Type: Synthetic
Surface Brand:
Age:

Notes:

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Table with 7 Pin Side, Board Number, and 10 Pin Side columns. Rows 1-8.

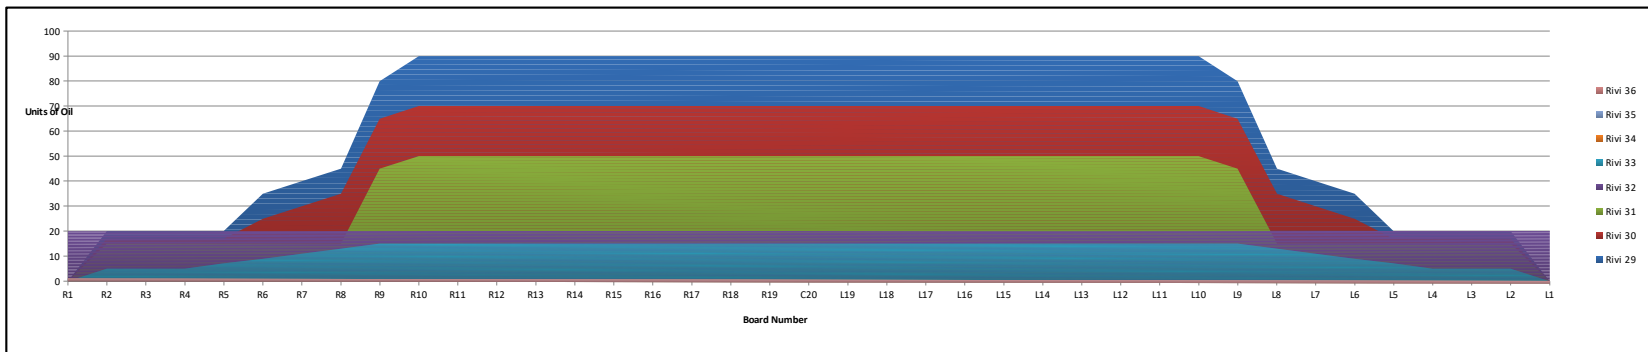



Kesäkisa 2024

Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 27,0	3,3	3L-7L	Left = 7,4	2,0
3R-7R	Right = 27,0	3,3	3R-7R	Right = 7,4	2,0
18L-18R	Center = 90,0		18L-18R	Center = 15,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 21,2	3,3	3L-7L	Left = 0,0	#JAKO/0!
3R-7R	Right = 21,2	3,3	3R-7R	Right = 0,0	#JAKO/0!
18L-18R	Center = 70,0		18L-18R	Center = 0,0	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 15,0	3,3	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 15,0	3,3	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 50,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 20,0	1,0	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 20,0	1,0	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 20,0		18L-18R	Center = #JAKO/0!	

Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,091	3,3	3L-7L	Left = 0,006	2,0
3R-7R	Right = 0,091	3,3	3R-7R	Right = 0,006	2,0
18L-18R	Center = 0,302		18L-18R	Center = 0,013	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,080	3,3	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,080	3,3	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,264		18L-18R	Center = 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,069	3,3	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,069	3,3	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,231		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,017	1,0	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,017	1,0	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,017		18L-18R	Center = 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

