



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date: 30-syys-20
Pattern Type:
Pattern Difficulty:
Pattern Designer: jkl
Pattern Volume (ml): 21,81

Surface Information

Surface Type: Synthetic
Surface Brand: Brunswick Pro Lane
Age: 15

Pattern Parameters

Pattern Number:
Pattern Name: Unelma 2023
Mode: Clean & Oil
Forward Speed: Quick Clean
Start Cleaner Spray: 0
Start Squeegee: 0
Start Oiling: 6
Split Pattern:


Supplies Information

Lane Cleaner: Judge
Cleaner Mixture Ratio: 6 : 1
Cleaner Transition Distance: Authority22
Cleaner Spray End Distance: 52 Envoy
Lane Conditioner: Logic 2.0

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Table with 8 rows (ZONE 1-8) and 34 columns (7 Pin Side, Board Number, 10 Pin Side).

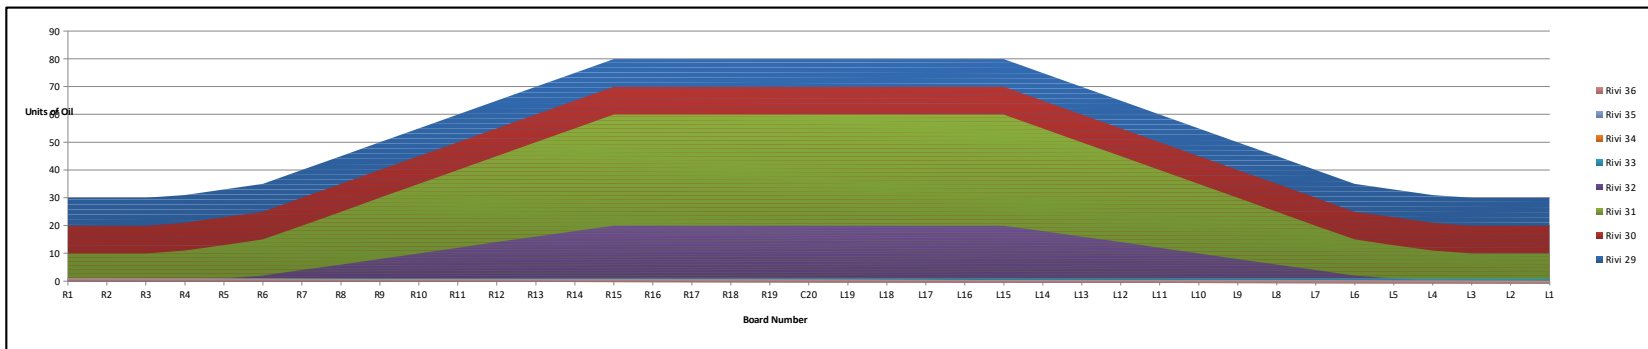



## Unelma 2023

### Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 33,8	2,3	3L-7L	Left = 1,0	1,0
3R-7R	Right = 33,8	2,3	3R-7R	Right = 1,0	1,0
18L-18R	Center = 80,0		18L-18R	Center = 1,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 23,8	2,9	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 23,8	2,9	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 70,0		18L-18R	Center = #JAKO/0!	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 13,8	4,3	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 13,8	4,3	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 60,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 1,4	14,2	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 1,4	14,2	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 20,0		18L-18R	Center = #JAKO/0!	

### Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,142	2,3	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,142	2,3	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,335		18L-18R	Center = 0,000	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,080	2,9	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,080	2,9	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,235		18L-18R	Center = 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,058	4,3	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,058	4,3	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,251		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,002	25,0	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,002	25,0	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,042		18L-18R	Center = 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

