



Official Lane Maintenance and Capital Equipment Provider

DIRECT+
Conditioning System



ENVOY



AUTHORITY22[®]

Select Machine

Pattern Information

Date: 30-loka-21
 Pattern Type:
 Pattern Difficulty:
 Pattern Designer: Jäke
 Pattern Volume (ml): 21,71

Surface Information

Surface Type: Synthetic
 Surface Brand:
 Age:

Pattern Parameters

Pattern Number:
 Pattern Name: Unelmakaadot 2025
 Mode: Clean & Oil
 Forward Speed: Quick Clean
 Start Cleaner Spray: 0
 Start Squeegee: 0
 Start Oiling: 6
 Split Pattern:


Supplies Information

Lane Cleaner: Judge
 Cleaner Mixture Ratio: 8 : 1
 Cleaner Transition Distance: Authority22
 Cleaner Spray End Distance: 54 Envoy
 Lane Conditioner: Hp 309 hv

Notes: _____

Zone	1	2	3	4	5	6	7	8
Zone End Distance	10	18	24	28	32	42		
Zone Ratio L	4,0 : 1	4,2 : 1	10,0 : 1	12,0 : 1	### : 1	### : 1	### : 1	### : 1
Zone Ratio R	4,0 : 1	4,2 : 1	10,0 : 1	12,0 : 1	### : 1	### : 1	### : 1	### : 1
Zone Volume (ml)	9,39	6,57	3,48	1,66	0,62	0,00	0,00	0,00

ZONE	7 Pin Side										Board Number										10 Pin Side																		
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1
1	0	25	25	25	25	25	35	40	45	50	65	85	100	100	100	100	100	100	100	100	100	100	100	100	100	100	85	65	50	45	40	35	25	25	25	25	25	0	
2	0	15	15	20	20	25	35	35	40	45	50	70	90	90	90	90	90	90	90	90	90	90	90	90	90	90	70	50	45	40	35	35	25	25	20	20	15	15	0
3	0	0	8	8	8	8	8	8	8	20	30	40	45	60	80	80	80	80	80	80	80	80	80	80	80	60	45	40	30	20	8	8	8	8	8	8	8	0	0
4	0	0	5	5	5	5	5	5	5	15	20	30	35	40	50	60	60	60	60	60	60	60	60	60	50	40	35	30	20	15	5	5	5	5	5	5	5	0	0
5	0	0	0	0	0	0	0	0	5	7	9	11	13	15	17	19	25	25	25	25	25	25	25	25	19	17	15	13	11	9	7	5	0	0	0	0	0	0	0
6	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7																																							
8																																							

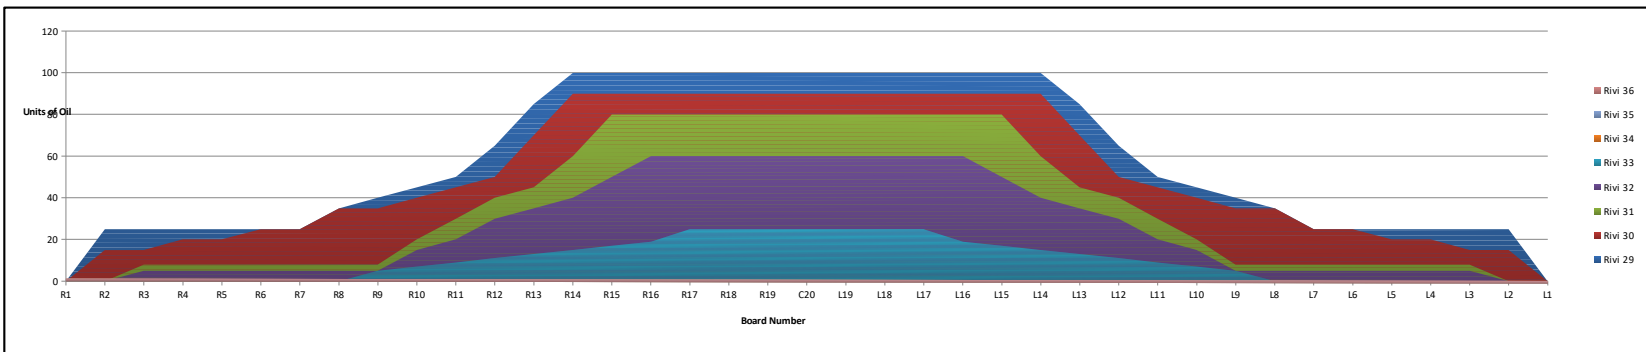



Unelmakaadot 2025

Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 25,0	4,0	3L-7L	Left = 0,0	#JAKO/0!
3R-7R	Right = 25,0	4,0	3R-7R	Right = 0,0	#JAKO/0!
18L-18R	Center = 100,0		18L-18R	Center = 25,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 21,0	4,2	3L-7L	Left = 0,0	#JAKO/0!
3R-7R	Right = 21,0	4,2	3R-7R	Right = 0,0	#JAKO/0!
18L-18R	Center = 90,0		18L-18R	Center = 0,0	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 8,0	10,0	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 8,0	10,0	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 80,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 5,0	12,0	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 5,0	12,0	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 60,0		18L-18R	Center = #JAKO/0!	

Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,105	4,0	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,105	4,0	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,419		18L-18R	Center = 0,042	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,070	4,2	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,070	4,2	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,302		18L-18R	Center = 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,020	10,0	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,020	10,0	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,201		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,008	12,0	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,008	12,0	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,101		18L-18R	Center = 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

