



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date: 5-tammi-22
Pattern Type:
Pattern Difficulty:
Pattern Designer: JKH
Pattern Volume (ml): 22,62

Surface Information

Surface Type: Synthetic
Surface Brand:
Age:

Pattern Parameters

Pattern Number:
Pattern Name: Carbo 2022
Mode: Clean & Oil
Forward Speed: Quick Clean
Start Cleaner Spray: 0
Start Squeegee: 0
Start Oiling: 6
Split Pattern:


Supplies Information

Lane Cleaner: Judge
Cleaner Mixture Ratio: 6 : 1
Cleaner Transition Distance: Authority22
Cleaner Spray End Distance: 54 Envoy
Lane Conditioner: Logic

Notes:

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Pin distribution table with columns for 7 Pin Side, Board Number, and 10 Pin Side, and rows for Zones 1-8.

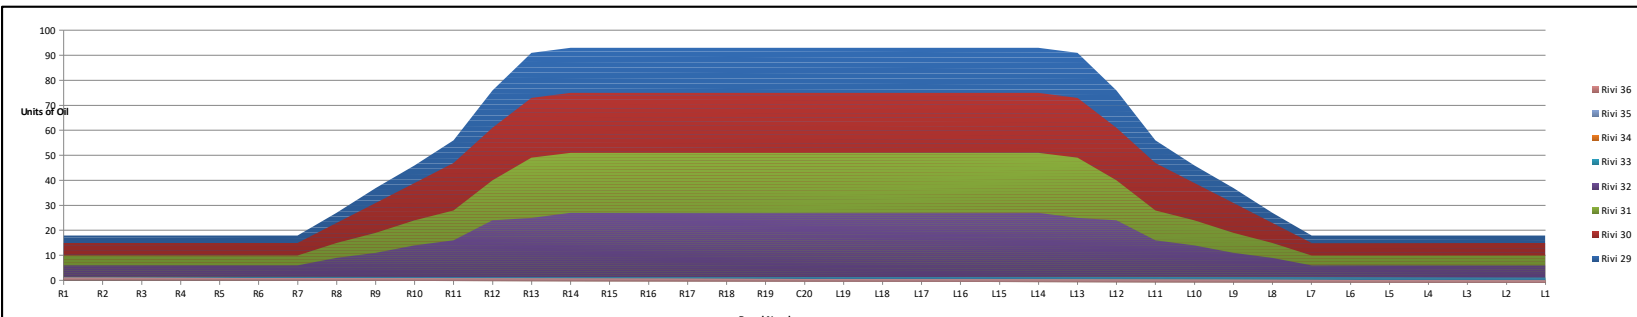



Carbo 2022

Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 18,0	5,1	3L-7L	Left = 1,0	1,0
3R-7R	Right = 18,0	5,1	3R-7R	Right = 1,0	1,0
18L-18R	Center = 93,0		18L-18R	Center = 1,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 15,0	5,0	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 15,0	5,0	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 75,0		18L-18R	Center = #JAKO/0!	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 10,0	5,1	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 10,0	5,1	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 51,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 6,0	4,5	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 6,0	4,5	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 27,0		18L-18R	Center = #JAKO/0!	

Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,091	5,1	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,091	5,1	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,468		18L-18R	Center = 0,000	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,050	5,0	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,050	5,0	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,251		18L-18R	Center = 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,046	5,1	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,046	5,1	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,235		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,008	4,5	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,008	4,5	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,034		18L-18R	Center = 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

