

Pattern Information

Date 28-joulu-19
Pattern Type
Pattern Difficulty
Pattern Designer
Pattern Volume (ml) 22,48

Surface Information

Surface Type Synthetic
Surface Brand
Age

Pattern Parameters

Pattern Number
Pattern Name Carbo 2025 syys
Mode Clean & Oil
Forward Speed Quick Clean
Start Cleaner Spray 0
Start Squeegee 0
Start Oiling 6
Split Pattern


Supplies Information

Lane Cleaner Judge
Cleaner Mixture Ratio 6 : 1
Cleaner Transition Distance Authority22
Cleaner Spray End Distance 54 Envoy
Lane Conditioner Hp 309 hv

Notes

Zone	1	2	3	4	5	6	7	8
Zone End Distance	9	16	22	28	33	40		
Zone Ratio L	2,7 : 1	3,0 : 1	5,0 : 1	10,0 : 1	### : 1	### : 1	### : 1	### : 1
Zone Ratio R	2,7 : 1	3,0 : 1	5,0 : 1	10,0 : 1	### : 1	### : 1	### : 1	### : 1
Zone Volume (ml)	9,59	5,84	3,55	2,31	1,19	0,00	0,00	0,00

ZONE	7 Pin Side												Board Number												10 Pin Side															
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1	
1	0	30	30	30	40	40	40	44	47	50	70	100	100	100	100	100	100	100	100	100	100	100	100	100	100	100	100	70	50	47	44	40	40	40	30	30	30	0		
2	0	0	20	20	30	30	30	40	40	45	60	80	80	80	80	80	80	80	80	80	80	80	80	80	80	80	80	60	45	40	40	30	30	30	20	20	0	0		
3	0	0	0	0	20	20	20	30	30	35	40	60	60	60	60	60	60	60	60	60	60	60	60	60	60	60	60	40	35	30	30	20	20	20	0	0	0	0		
4	0	0	0	0	0	0	20	20	20	30	30	40	40	40	40	40	40	40	40	40	40	40	40	40	40	40	40	30	30	20	20	20	0	0	0	0	0	0		
5	0	0	0	0	0	0	0	10	10	10	15	15	30	30	30	30	30	30	30	30	30	30	30	30	30	30	15	15	10	10	10	0	0	0	0	0	0	0		
6	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0		
7																																								
8																																								

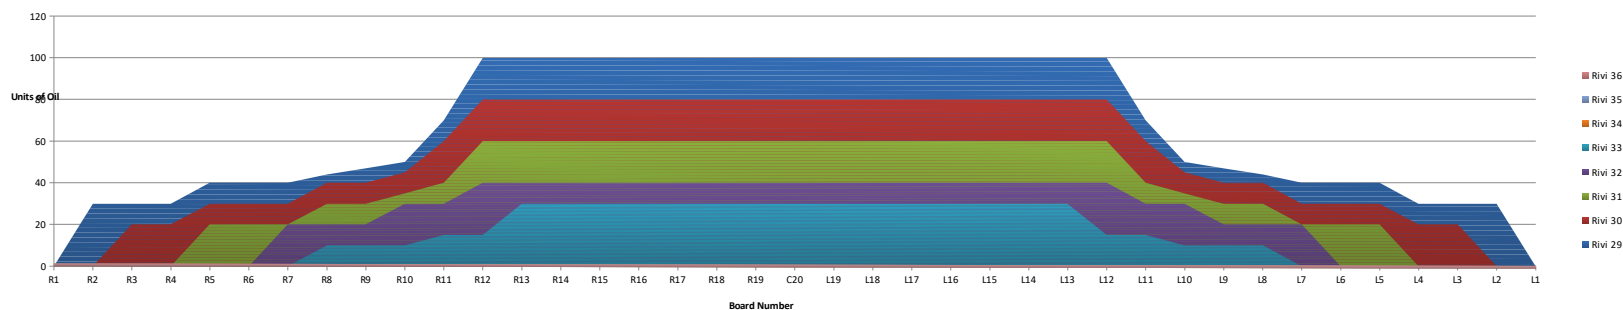



Carbo 2025 syys


Crosswise Ratios (by units)

Zone 1			
	Average	Ratio	
3L-7L	Left = 36,0	2,7	
3R-7R	Right= 36,0	2,7	
18L-18R	Center = 100,0		
Zone 2			
	Average	Ratio	
3L-7L	Left = 26,0	3,0	
3R-7R	Right= 26,0	3,0	
18L-18R	Center= 80,0		
Zone 3			
	Average	Ratio	
3L-7L	Left = 12,0	5,0	
3R-7R	Right= 12,0	5,0	
18L-18R	Center= 60,0		
Zone 4			
	Average	Ratio	
3L-7L	Left = 4,0	10,0	
3R-7R	Right= 4,0	10,0	
18L-18R	Center = 40,0		
Zone 5			
	Average	Ratio	
3L-7L	Left = 0,0	#JAKO/0!	
3R-7R	Right= 0,0	#JAKO/0!	
18L-18R	Center= 30,0		
Zone 6			
	Average	Ratio	
3L-7L	Left = 0,0	#JAKO/0!	
3R-7R	Right= 0,0	#JAKO/0!	
18L-18R	Center= 0,0		
Zone 7			
	Average	Ratio	
3L-7L	Left = #JAKO/0!	#JAKO/0!	
3R-7R	Right= #JAKO/0!	#JAKO/0!	
18L-18R	Center = #JAKO/0!		
Zone 8			
	Average	Ratio	
3L-7L	Left = #JAKO/0!	#JAKO/0!	
3R-7R	Right= #JAKO/0!	#JAKO/0!	
18L-18R	Center= #JAKO/0!		

Crosswise Ratios (by ml)

Zone 1			
	Average	Ratio	
3L-7L	Left = 0,136	2,7	
3R-7R	Right= 0,136	2,7	
18L-18R	Center = 0,377		
Zone 2			
	Average	Ratio	
3L-7L	Left = 0,076	3,0	
3R-7R	Right= 0,076	3,0	
18L-18R	Center= 0,235		
Zone 3			
	Average	Ratio	
3L-7L	Left = 0,030	5,0	
3R-7R	Right= 0,030	5,0	
18L-18R	Center= 0,151		
Zone 4			
	Average	Ratio	
3L-7L	Left = 0,010	10,0	
3R-7R	Right= 0,010	10,0	
18L-18R	Center = 0,101		
Zone 5			
	Average	Ratio	
3L-7L	Left = 0,000	#JAKO/0!	
3R-7R	Right= 0,000	#JAKO/0!	
18L-18R	Center= 0,063		
Zone 6			
	Average	Ratio	
3L-7L	Left = 0,000	#JAKO/0!	
3R-7R	Right= 0,000	#JAKO/0!	
18L-18R	Center= 0,000		
Zone 7			
	Average	Ratio	
3L-7L	Left = 0,000	#JAKO/0!	
3R-7R	Right= 0,000	#JAKO/0!	
18L-18R	Center = 0,000		
Zone 8			
	Average	Ratio	
3L-7L	Left = 0,000	#JAKO/0!	
3R-7R	Right= 0,000	#JAKO/0!	
18L-18R	Center= 0,000		

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

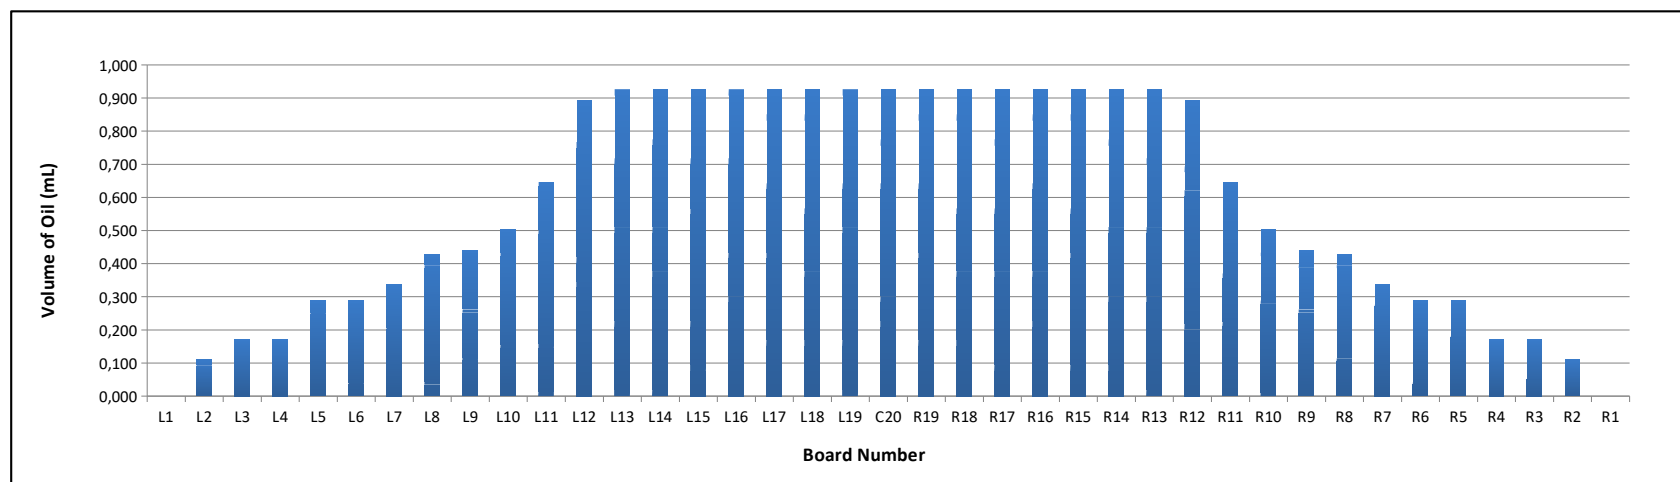



3L-7L 18L-18R 3R-7R

	Left	Center	Right
Zone 2	1,3	1,2	1,3
Zone 3	3,0	1,6	3,0
Zone 4	9,0	2,5	9,0
Zone 5	###	3,3	###
Zone 6	###	###	###
Zone 7	###	###	###
Zone 8	###	###	###

Carbo 2025 syys

Lengthwise Ratio By Board (units & ml)

[illegible]