



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date 27-huhti-19
Pattern Type
Pattern Difficulty
Pattern Designer JKH
Pattern Volume (ml) 22,81

Surface Information

Surface Type Synthetic
Surface Brand
Age

Pattern Parameters

Pattern Number
Pattern Name Arazzo
Mode Clean & Oil
Forward Speed Heavy Clean (Envoy)
Start Cleaner Spray 0
Start Squeegee 0
Start Oiling 6
Split Pattern


Supplies Information

Lane Cleaner Judge
Cleaner Mixture Ratio 6 : 1
Cleaner Transition Distance Authority22
Cleaner Spray End Distance 54 Envoy
Lane Conditioner DEFYv30

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Table with 8 rows (ZONE 1-8) and 33 columns (7 Pin Side, Board Number, 10 Pin Side).

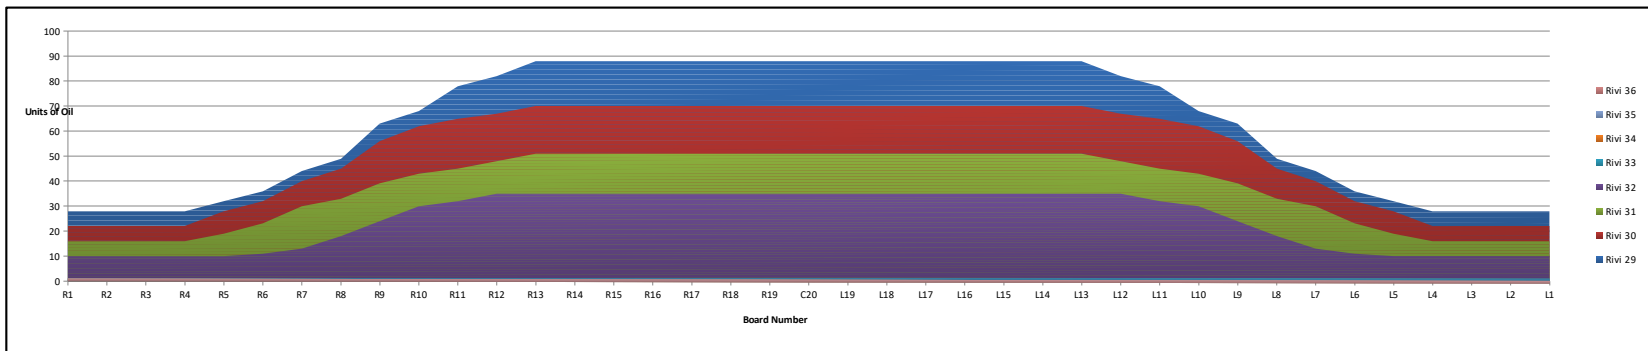



Arazzo

Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 33,6	2,6	3L-7L	Left = 1,0	1,0
3R-7R	Right = 33,6	2,6	3R-7R	Right = 1,0	1,0
18L-18R	Center = 88,0		18L-18R	Center = 1,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 28,8	2,4	3L-7L	Left = 0,0	#JAKO/0!
3R-7R	Right = 28,8	2,4	3R-7R	Right = 0,0	#JAKO/0!
18L-18R	Center = 70,0		18L-18R	Center = 0,0	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 20,8	2,4	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 20,8	2,4	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 51,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 10,8	3,2	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 10,8	3,2	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 35,0		18L-18R	Center = #JAKO/0!	

Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,127	2,6	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,127	2,6	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,332		18L-18R	Center = 0,000	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,085	2,4	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,085	2,4	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,205		18L-18R	Center = 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,070	2,4	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,070	2,4	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,171		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,032	3,2	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,032	3,2	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,103		18L-18R	Center = 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

